






45-0492

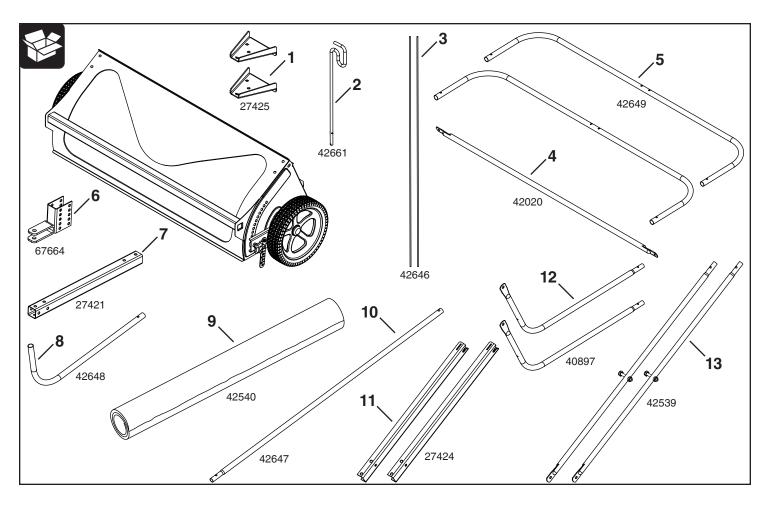


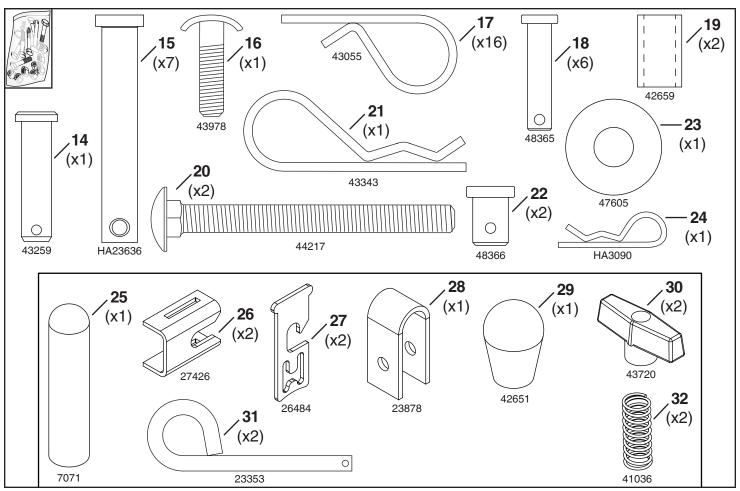


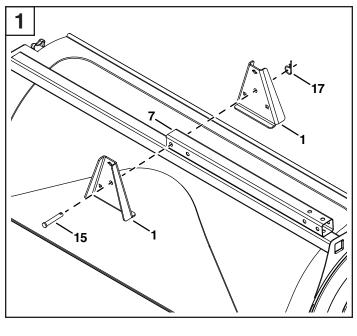


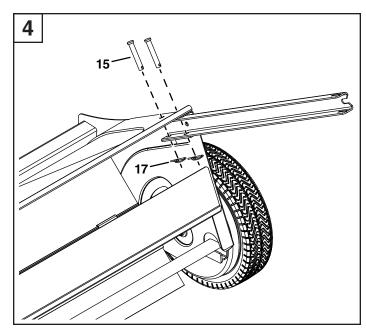


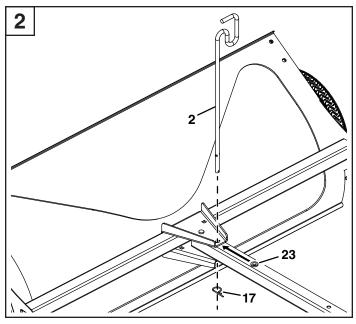


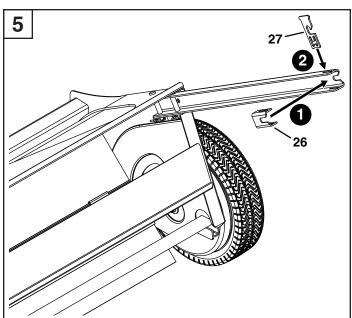


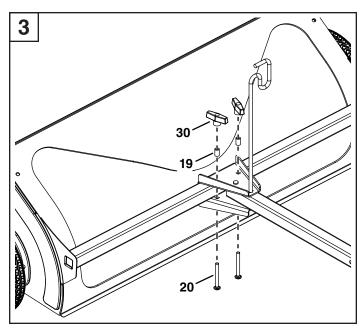


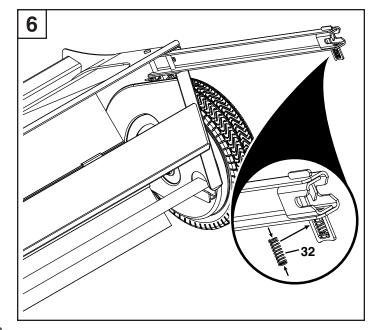


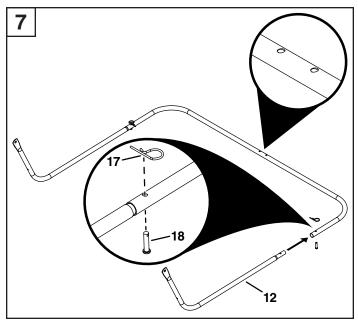


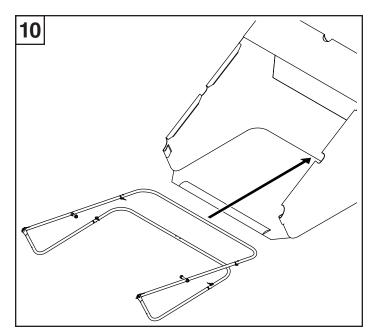


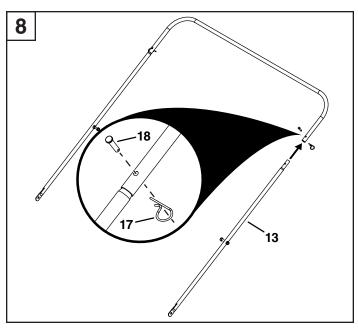


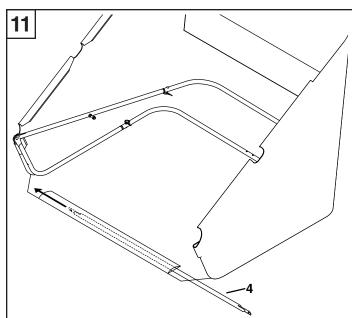


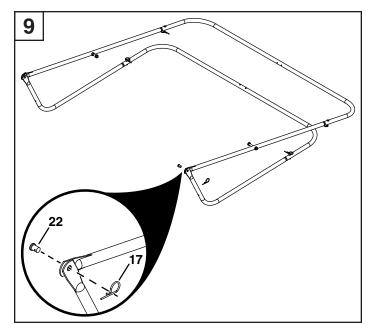


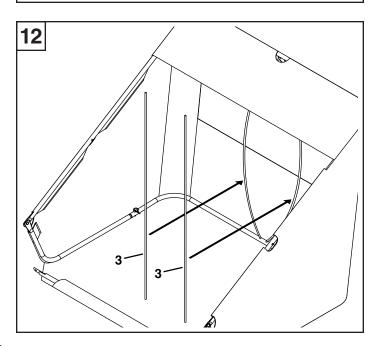


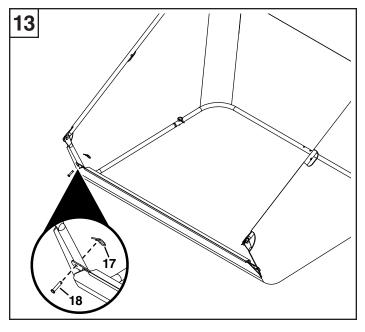


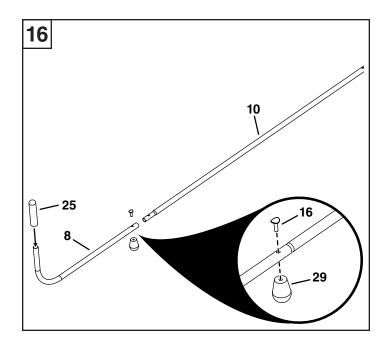


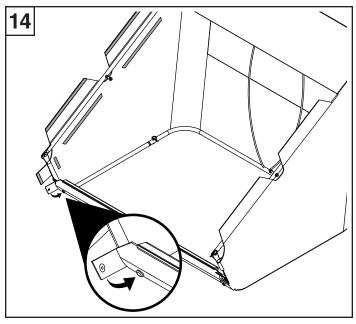


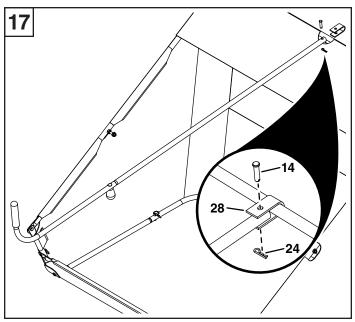


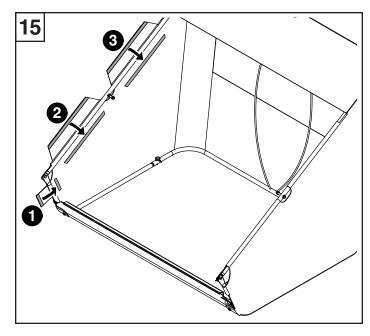


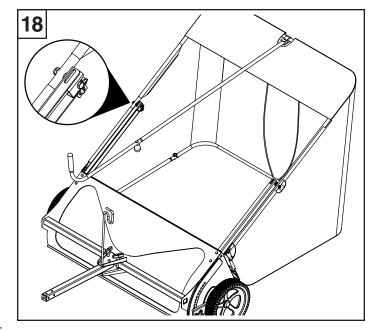

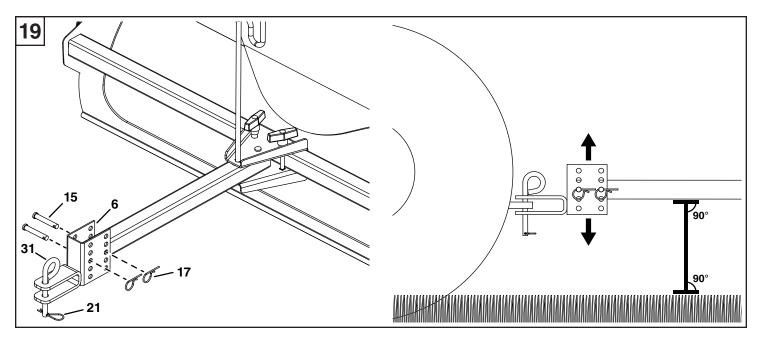

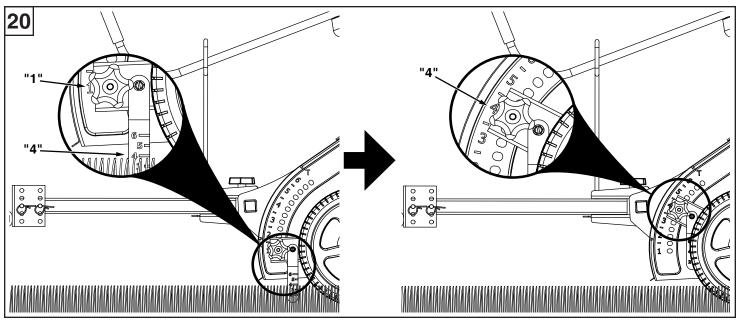

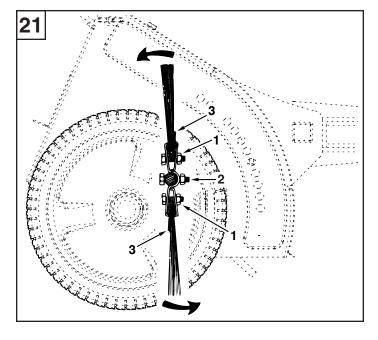

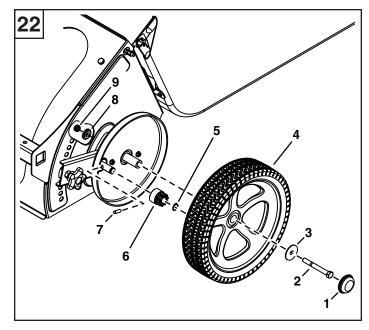

### Safety

Read and understand the vehicle manual and these instructions before using this sweeper. Always instruct other users before they operate the sweeper.

## **Symbols**



Oil



Grease

### Operation



#### $\Delta$ Risk of Injury

- Never allow children to handle the sweeper
- Never allow anyone to ride on the sweeper.
- Always wear footwear when working with the sweeper.
- Never operate the sweeper if foreign matter is stuck in the brushes. Turn off the vehicle engine, remove the foreign matter and check for damage. If the sweeper is damaged, repair before continuing to operate.



### $\Delta$ Risk of Overturning

- Check the loading capacity of the towing vehicle and only sweep appropriate amounts of grass and leaves into the grass bag.
- On starting off, make sure that the sweeper retains its balance and does not overturn.
- · Do not work on slopes greater than 10°.
- Do not exceed 6 mph (9.6 km/h).
- Drive slowly and carefully, especially when turning and on uneven ground.

**Note:** The driving and braking characteristics depend on the towed load.



#### $\Delta$ Risk of Fire

- Always keep the sweeper away from fire. Excessive heat can damage the brushes and grass bag and could cause the bag to burn.
- Always empty the grass bag before storing the sweeper; spontaneous combustion may occur.

#### **ENGLISH**

# Attaching the Sweeper to Tow Vehicle (See Figure 19)

- Park the tow vehicle and sweeper on flat level ground.
- · Attach the sweeper to the tractor hitch.
- Use the set of holes in the hitch bracket that best level drawbar to the ground.

# Setting the Brush Height (See Figure 20)

- Make sure draw bar is level to ground (see Attaching Sweeper to Tow Vehicle above).
- Pull out on height adjustment knob and set to the "1" position.
- Note the number that the top of the grass comes to on the grass height gauge.
- Pull out on the height adjustment knob and set to the same number as read from the grass height gauge.

#### **Emptying the Grass Bag**

- Stop the towing vehicle and turn off the engine.
- Empty the grass bag by pulling on the dump handle.

#### **Using the Offset Hitch**

- Loosen the two knobs on the drawbar bracket.
- Slide the drawbar to the left or right end of the sweeper housing.
- Tighten the two knobs on the drawbar bracket.

#### **Using the Transport Feature**

- Use the transport feature when moving across pavement or areas you do not want to sweep.
- Empty grass bag of all debris (see Emptying the Grass Bag above).
- Pull out on the height adjustment knob and set to the "T" position.

#### **Maintenance**

Lubricate the wheel bearings once during the season. Remove hub cap and apply a few drops of light oil.

Lubricate the brush axle at the beginning and end of the season.

Clean and grease drive gears every two years (See Figure 22). Remove hub cap (1), bolt (2), washer (3), wheel (4), step spacer (8), and nut (9).

### Service

# Replace the Brushes (See Figure 21)

- Remove grass bag. Only loosen bolt and nut on the single brush retainers (1).
   Do not loosen double brush retainer (2).
- Note which side of brush the bristles overlap (3). Slide brush out.
- Install new brush with bristles overlap
  (3) as before.


# Wheel Gear and Pawl (See Figure 22)

Do not remove both wheels at the same time; parts are not interchangeable.

- Remove hub cap (1), bolt (2), washer (3), wheel (4), step spacer (8), and nut (9).
- Remove snap ring (5), ratchet gear (6), and drive pin (7). Clean shaft and gear.
- Install ratchet gear (6) and drive pin (7). Pin must move freely in shaft.
- Lightly grease shaft and fill ratchet gear
  (6) with grease.
- Lightly grease brush axle and gear teeth on wheel.
- Install hub cap (1), bolt (2), washer (3), wheel (4), step spacer (8), and nut (9).

**Note:** Brushes should only move during forward rotation. If brushes rotate in both directions, drive pin is jamming the ratchet gear. Disassemble and make sure drive pin moves freely.

# **REPAIR PARTS ILLUSTRATION**

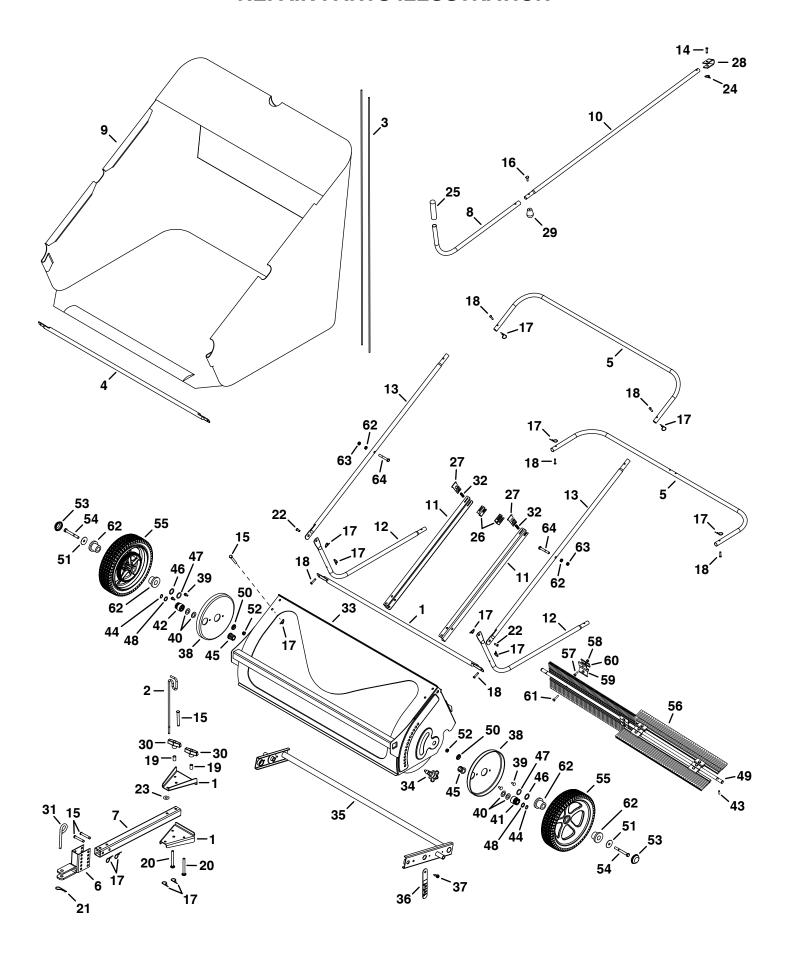

# **REPAIR PARTS LIST**

| REF | QTY | PART NO | DESCRIPTION                     | REF | QTY | PART NO  | DESCRIPTION               |
|-----|-----|---------|---------------------------------|-----|-----|----------|---------------------------|
| 1   | 2   | 27425   | Drawbar Bracket                 | 34  | 1   | 40891    | Spring Loaded Pin         |
| 2   | 1   | 42661   | Handle Holder                   | 35  | 1   | 67730    | Height Adjustment Tube    |
| 3   | 2   | 42646   | Hopper Support Rod              | 36  | 1   | 27442    | Brush Height Gauge        |
| 4   | 1   | 42020   | Bag Frame Tube                  | 37  | 1   | 710-0896 | Hex Screw, 1/4-14 x 5/8"  |
| 5   | 2   | 42649   | Rear Hopper Tube                | 38  | 2   | 41035    | Dust Cover                |
| 6   | 1   | 67664   | Hitch                           | 39  | 4   | 48373    | Pop Rivet                 |
| 7   | 1   | 27421   | Drawbar                         | 40  | 4   | 40001    | Shim Washer               |
| 8   | 1   | 42648   | Lower Handle Tube               | 41  | 1   | 48651    | Pinion Gear (LH)          |
| 9   | 1   | 42540   | Hopper Bag                      | 42  | 1   | 48652    | Pinion Gear (RH)          |
| 10  | 1   | 42647   | Upper Handle Tube               | 43  | 2   | 47046    | Dowel Pin, 1/4 x 3/4"     |
| 11  | 2   | 27424   | Bag Arm                         | 44  | 2   | 42094    | Retaining Ring            |
| 12  | 2   | 40897   | Lower Hopper Tube               | 45  | 2   | 67407    | Bearing Assembly          |
| 13  | 2   | 42539   | Upper Hopper Tube               | 46  | 2   | 44008    | Washer, 1-1/8"            |
| 14  | 1   | 43259   | Clevis Pin, 5/16 x 1-1/4"       | 47  | 2   | 1540-31  | Washer, 1-1/14"           |
| 15  | 7   | HA23636 | Clevis Pin, 3/8 x 2-1/4"        | 48  | 2   | 42093    | Washer, .598"             |
| 16  | 1   | 43978   | Bolt, 1/4-20 x 1"               | 49  | 1   | 40722    | Brush Shaft               |
| 17  | 16  | 43055   | Hair Pin, 3/32 x 1.8"           | 50  | 2   | 26538    | Step Spacer               |
| 18  | 6   | 48365   | Clevis Pin, 1/4 x 1.11"         | 51  | 2   | 141      | Washer, 1-1/4"            |
| 19  | 2   | 42659   | Spacer, 3/4"                    | 52  | 2   | 1038     | Nylock Jam Nut, 3/8"      |
| 20  | 2   | 44217   | Carriage Bolt, 5/16-18 x 3"     | 53  | 2   | 41017    | Hub Cap                   |
| 21  | 1   | 43343   | Hair Cotter Pin, 3/32 x 2-5/16" | 54  | 2   | 44961    | Hex Bolt, 3/8-24 x 3-1/4" |
| 22  | 2   | 48366   | Clevis Pin, 3/8 x 1/2"          | 55  | 2   | 40987    | Wheel                     |
| 23  | 1   | 47605   | Washer, 1"                      | 56  | 4   | 46780    | Brush                     |
| 24  | 1   | HA3090  | Hair Cotter Pin, .08 x 1-1/8"   | 57  | 8   | 43012    | Hex Bolt, 1/4-20 x 3/4"   |
| 25  | 1   | 7071    | Handle Grip                     | 58  | 12  | 47189    | Nylock Nut, 1/4"          |
| 26  | 2   | 27426   | Pivot Rod Support Bracket       | 59  | 4   | 23580    | Brush Retainer (Double)   |
| 27  | 2   | 26484   | Pivot Rod Retainer              | 60  | 8   | 23581    | Brush Retainer (SIngle)   |
| 28  | 1   | 23878   | U-Clamp                         | 61  | 4   | 43661    | Hex Bolt, 1/4-20 x 1"     |
| 29  | 1   | 42651   | Knob                            | 62  | 2   | 712-3008 | Jam Nut, 3/8"             |
| 30  | 2   | 43720   | Wing Knob                       | 63  | 2   | 42210    | Nylock Jam Nut, 3/8"      |
| 31  | 2   | 23353   | Hitch Pin                       | 64  | 2   | 43432    | Hex Bolt, 3/8-16 x 2-1/2" |
| 32  | 2   | 41036   | Compression Spring              |     | 1   | 42571    | Owner's Manual            |
| 33  | 1   | 67634   | Sweeper Housing                 |     |     |          |                           |

**SpeedEPart** the fastest way to purchase parts www.speedepart.com

## **REPAIR PARTS**

Agri-Fab, Inc. 303 West Raymond Sullivan, IL. 61951 217-728-8388 www.agri-fab.com